

Standard Procedure: Gas Cylinder Change Over.



Figure 1 Typical side entry attached regulator (non-flammable gas).

- a. Close Cylinder valve **1** (turn hand wheel clockwise).
- b. Reduce the outlet pressure (turn the Regulator control valve **2** anti-clockwise).
- c. Vent any gas in the regulator at any secondary supply valve or attached apparatus whenever possible. (Exercise caution when venting flammable, corrosive or toxic gas).
- d. Remove the regulator from the cylinder valve (undo the connector **3** at the cylinder valve with a regulator spanner). Remember for flammable gas, connectors are left hand threaded.